

# Retractable Wrist Cuff

## Installation and Usage Instructions

*Please read instructions carefully and fully before installation and/or usage.*

- Do not use on or near rotating equipment.
- Dispose of if a drop is experienced.
- Beware that the snap hook can be accidentally opened by hitting the trigger snap. For a positive connection always remove the snap hook and hook the split ring directly to the tool tether attachment.
- Inspect prior to each use for the following and discard if found:
  - Wearing of the retractor rope or wire.
  - Degraded stitching.
  - Bent or damaged split ring.
  - Particular attention should be given to the terminating end where the cable attaches to the key ring receptacle as this is the **“business end”** and stresses can occur due to bending and twisting of the cable.
- Never let the retractor freely retract, always hold the tool when being retracted back into the retractor housing.
- Always install tools in a safe location as a precaution should a tool drop during installation.
- Always wear proper PPE.

### WEIGHT RATINGS

PART NO.	TOTAL WEIGHT LIMIT (LBS)
WC RETKV	1.0 lbs
WC RETWR	1.5 lbs

### WARNINGS

ALWAYS WEAR APPROPRIATE PROTECTIVE EQUIPMENT.  
DO NOT USE THIS PRODUCT ON OR NEAR ROTATING EQUIPMENT. IMPROPER USE COULD RESULT IN DEATH OR DISMEMBERMENT. IF ANY CRACKS, RIPS OR TEARS NOTED, PRODUCT REPLACEMENT IS REQUIRED.



**1** Insert your hand through the wrist cuff opening. Position the wrist cuff just below your hand to a desired and comfortable location. Be sure the snap hook is furthest away from your body.



**2** Next tighten the wrist cuff to the desired tension by pulling the flap and fastening to the mating hook and loop.



**3** Install the snap hook by pulling back on the trigger snap and engage the tether loop on the tool. For a positive control installation the snap hook can be removed and install the split ring directly to the tether loop on the tool.

# INSTALLATION